

Index

A

- AC power panel 1-12
 - accounting
 - hard meters 1-6
 - Acres
 - DCN board
 - installation 12-12
 - removal 12-10
 - translator board
 - installation 12-12
 - removal 12-10
 - Acres Rio network interface boards
 - installation 12-29
 - removal 12-21
 - applications
 - descriptions 1-15
 - Game Menu 1-18
 - MMS 1-15
 - audio
 - codec 1-13
 - encoder/decoder 1-13
 - line-level connector 1-15
 - lower speakers 1-12
 - system 1-13
 - top speaker 1-12
 - volume setting 4-7, 6-8
 - audio amplifier board
 - installation 11-62
 - audio speaker
 - in belly door
 - installation 11-68
 - removal 11-67
 - on top of display cavity
 - installation 11-66
 - removal 11-65
 - Auto Launch features 4-18
-
- B**
- background out of service state 1-19
 - Bally network interface boards
 - installation
 - in Acres configuration 12-24
 - in Hubble configuration 3-15, 12-25
 - removal
 - from Acres configuration 12-16
 - from Hubble configuration 12-17

- belly door
 - glass 1-15
 - installation 13-32
 - removal 13-31
 - sensors 1-20
- bezel 1-5
- bill acceptor
 - defined 1-6
 - indicators 1-6
 - installation 10-5
 - removal 10-4
- bill drop 1-8
- bill stacker. *See* currency cartridge
- BIOS ROM 1-11
- bolster. *See* currency column
- boot
 - BIOS 1-11
 - machine state 1-19
 - ROM 1-11
 - starting machine 3-31
- bus interfaces 1-10
- buttons
 - lamp replacement 13-7
 - mechanical 1-14
 - microswitch replacement 13-4, 13-9

C

- cabinet. *See* machine cabinet
- Caesar's network interface board
 - installation 3-25, 12-28
 - removal 12-20
- calibration
 - bill acceptor 10-5
 - touchscreen 9-40
- candle 1-15
- card reader
 - installation 12-31
 - removal 12-31
- Cash/Credit
 - description 1-14
- casino network, equipment 1-13

CDS network interface boards
 installation
 in Acres configuration 12-22
 in Hubble configuration 3-12, 3-28,
 12-23
 removal
 from Acres configuration 12-14
 from Hubble configuration 12-15
central processing unit. *See* CPU
circuit board
 installation 11-16
 removal 11-15
circuit breaker
 installation 11-54
 removal 11-53
club card display. *See* LCD display
coin acceptor
 description 1-6
 installation 10-8
 removal 10-6
coin denomination replacement 10-22
coin drop 1-8
coin hopper 1-8
Coin In
 hard meter 1-7
coin optics board
 installation 10-10
 removal 10-9
Coin Out
 hard meter 1-7
coin tray 1-8
commands, service port 5-9
comparator 1-6
composite images 1-5
Concept 3 messages 8-22
connector, Molex 1-15
CPU 1-10
CPU assembly
 components 1-8
credit display LED 1-15
credit display LED board
 installation 13-22
 removal 13-22
currency acceptor. *See* bill acceptor

currency cartridge
 description 1-7
 sensors 1-20
currency column
 components 1-5
 door sensor 1-20

D

degaussing procedure 2-22
denomination
 changing 10-22
 support 1-6
denomination cap
 installation 10-51
 removal 10-50
detection, of coins 1-6
diagnostics
 display LED 1-15
 MMS page 3-32
 tilt codes 8-6
diagnostics display LED board
 installation 13-22
 removal 13-22
disclaimers 1-7
display
 credit LED 1-15
 installation 12-37
 removal 12-36
 size 1-5
 tilt LED 1-15
display monitor
 description 1-4
 installation 9-10
 removal 9-3
display monitor chassis
 description 1-4
door locks 13-33
 sensors 1-19
doors, opening
 belly 2-9
 bezel 2-9
 currency column 2-8
 stoppage banner 6-4

doorswitch
 belly
 installation 13-37
 removal 13-37
 currency column
 installation 13-36
 removal 13-35
 drop
 installation 13-41
 removal 13-41
 electronics box
 installation 13-39
 removal 13-39

Drop
 hard meter 1-7

drop box, door sensor 1-20

drop chute 1-8

duty cycle, service candle 6-3

E

EEPROM
 defined 1-10
 description 1-11
 peripheral memory board 1-11

electrically erasable programmable
 ROM. *See* EEPROM

electromechanical meters 1-6

electronics box
 definition 1-8
 door sensor 1-20
 doorswitch replacement 13-38
 fan cleaning 7-3

electronics chassis
 Neotech
 installation 9-18
 removal 9-14

electrostatic discharge
 specification A-3

equipment, for component removal 2-4

Ethernet board
 description 1-14

F

filling hopper 6-4

flash patterns, service candle 6-3

fluorescent ballast
 installation 13-26
 removal 13-25

fluorescent lamp
 installation 13-28
 removal 13-28

fluorescent lamp socket
 installation 13-30
 removal 13-29

fluorescent starter
 installation 13-24
 removal 13-23

frame buffer board. *See* video controller.

full-motion video, display of 1-5

fuse. *See* power fuse.

G

Game Menu
 description 1-18

games
 auto-launching 4-18
 licensing 1-18

general purpose input/output. *See* GPIO
 system

GPIO system
 description 1-11
 installation 11-10
 removal 11-6

graphics, compositing 1-5

GSI network interface board
 installation 3-21, 12-27
 removal 12-18

H

halt state 1-19

hand pay, clearing 6-4

hard disk
 installation 11-40
 storage subsystem 1-12

hard meters
 description 1-6
 installation 10-15
 removal 10-13

hardware bus 1-10

harness, main 2-7

hopper 1-8
 cleaning 7-2
 filling 6-4
hopper coin-out sensor, adjustment 10-18
hopper drawer
 installation 2-10
Hubble translator board
 debug port 8-23
 diagnostics 8-20
 installation 12-8
 network connection 3-10
 network support 1-13
 removal 12-6
 reset 8-22

I

IGT network interface board
 installation 3-18, 12-26
 removal 12-18
in service, placing machine in 6-2
industry standard architecture. *See* ISA
Intel CPU 1-10
ISA 1-10

J

Jackpot Total meter 1-7
jackpot, clearing 6-4

K

key locks
 definition 1-19
 installation 3-7
keypad
 installation 12-35
 removal 12-34

L

lamps
 belly glass 1-15
 bezel control button
 installation 13-8
 removal 13-8
 candle
 installation 13-14
 removal 13-14
 cash/credit
 installation 13-12
 removal 13-12
 change
 installation 13-12
 removal 13-12
 merchandising window 1-7
LCD display 1-13
LEDs
 credit display 1-15
 diagnostic display 1-15
 Hubble board 8-21
 POST display 8-18
lights, service candle 1-15
locks
 definition 1-19
 installation 3-7

M

machine cabinet
 dimensions 3-2
 layout 2-5
machine level change tag 2-3
Machine Management System. *See* MMS
machine states 1-19
machine versions 2-3
mechanical buttons 1-14
mechanical sensors 1-20
memory
 NVRAM 1-11
 system 1-10
merchandising window 1-7
meters, hard 1-7

MGM network interface board
 installation 3-24, 12-27
 removal 12-19

microprocessor. *See* CPU

microswitches
 bezel control button
 installation 13-6
 removal 13-5
 cash/credit button
 installation 13-10
 removal 13-10
 change button
 installation 13-10
 removal 13-10
 currency cartridge
 installation 13-20
 removal 13-16
 slot handle
 installation 10-67

Mikohn network interface boards
 installation 3-25, 12-28
 removal 12-20

MMS
 defined 1-15
 denomination change 10-47
 Diagnostics page 3-32
 invoking 2-23
 machine state 1-19
 user interface 1-17

Molex connector 1-15

money configuration options
 denomination change 10-47

monitor bezel 1-5

motherboard
 definition 1-10
 description 1-9
 differences 1-10
 installation 11-31
 removal 11-26
 Thor 1-10
 Tucson 1-10

MTBF (mean time between failures) A-3

N

network
 installation 3-10
 log description 8-22
 player tracking equipment 1-13

network interface board
 installation 12-21
 removal 12-13

nonvolatile random access memory. *See* NVRAM

normal machine state 1-19

NVRAM
 defined 1-10
 description 1-11
 peripheral memory board 1-11
 replacement 11-22

O

operating modes. *See* machine states

operating system
 in ROM 1-11

OS ROM 1-11

out of service state
 definition 1-19
 placing machine in 6-2

P

parts, return 2-3

PCI 1-10

Pentium CPU 1-10

peripheral connection interface. *See* PCI

peripheral memory board
 description 1-10
 location 1-9
 memory 1-11
 POST display 8-18
 replacement. *See* circuit board 11-15
 switch settings 8-16
 verification 8-15

play stoppage
 definition 1-18
 machine state 1-19

- player tracking
 - equipment 1-13
 - installation 3-10
 - system support 1-13
 - POST 8-18
 - power cord
 - routing 3-7
 - power fuse
 - installation 11-48
 - removal 11-48
 - power panel 1-12
 - power supply
 - installation 11-58
 - removal 11-57
 - power switch
 - location 2-2
 - powering up 3-31
 - power-on self test. *See* POST
 - PROM
 - installation 11-21
 - removal 11-19
 - Psycho board. *See* peripheral memory board
 - pull arm. *See* slot handle
- R**
- RAM 1-10
 - random access memory. *See* RAM
 - read only memory. *See* ROM
 - ROM
 - BIOS 1-11
 - defined 1-10
 - peripheral memory board 1-11
 - replacement 11-19
- S**
- Safe RAM. *See* SRAM. 1-11
 - SafeClear 2-25
 - SCSI controller board
 - definition 1-12
 - location 1-9
 - replacement. *See* circuit board 11-15
 - security, hardware 1-19
 - sensors 1-20
 - serial port 1-7
 - service calls, handling 6-3
 - service candle
 - definition 1-15
 - lamp replacement 13-14
 - meanings 6-3
 - service port
 - commands 5-9
 - description 1-7
 - using 5-9
 - ServicePoint
 - description 1-20
 - SIMM 1-10
 - single inline memory module. *See* SIMM
 - slot handle
 - definition 1-8
 - installation 10-59
 - slot stand assembly 3-6
 - sound system. *See* audio
 - Sparky board. *See* GPIO system
 - speakers
 - belly door 1-12
 - description 1-12
 - replacement 11-64, 11-67
 - specifications
 - altitude A-2
 - electrostatic discharge A-3
 - EMI A-2
 - humidity A-2
 - mean time between failures (MTBF) A-3
 - power A-5
 - shock A-2
 - temperature A-2
 - vibration A-2
 - SRAM
 - clearing 2-25
 - defined 1-11
 - installation 11-23
 - removal 11-22
 - start-up 3-31
 - storage subsystem 1-12
 - supplies, for component removal 2-4

system
 audio 1-13
 electronics box 1-8
 memory 1-10
 video 1-5
system hardware architecture 1-4
system software architecture 1-15

T

tilt states
 clearing 6-3
 code display 1-15
 definition 1-19
 meanings 8-6
tools, for component removal 2-4
top cap
 installation 2-16
 removal 2-16
Total Coin In/Out meters 1-7
touchscreen
 description 1-5
 installation 9-32
 removal 9-29
touchscreen controller
 installation 9-32
 removal 9-29
transformer
 function 1-12
 installation 11-51
 removal 11-49

V

video controller board
 definition 1-5
 location 1-9
 replacement. See circuit board 11-15
video display timing A-4
video subsystem, description 1-5
volume, setting 4-7, 6-8